



**01-066**  
**GENESIS 250/300**  
**THE CLAW**  
**INSTALLATION INSTRUCTIONS**

**INCLUDED:**  
4 Rail attachments  
2 Claw attachments  
Hardware Pack

**TOOLS NEEDED:**  
Cordless Drill  
17mm Wrench  
#3 Phillips Tip



Rail Attachments





2 Claw Attachments

**Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.**

**1**

Remove nut, lockwasher, and flat washer from, rail attachment bolt and secure to Claw as shown.

\*Repeat process for other three rail attachment's.

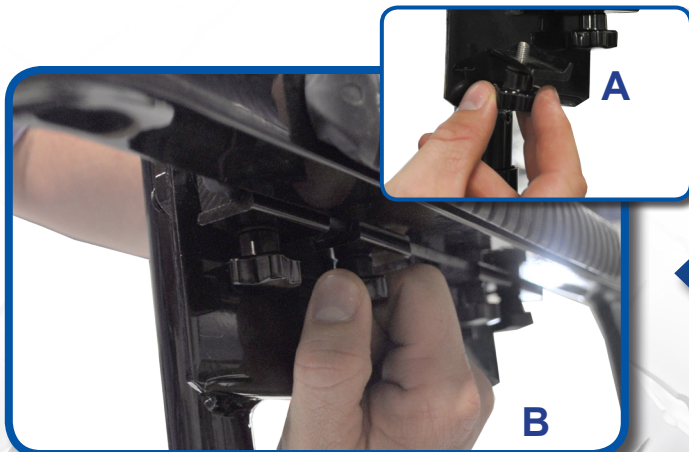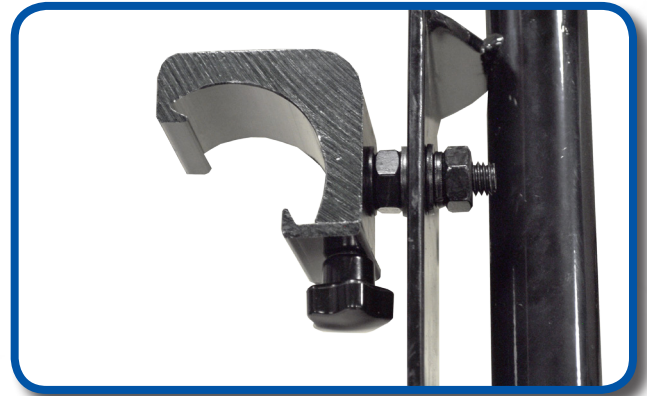


(A.) Remove threaded knobs from rail attachments and place onto rail system.

(B.) Re-attach threaded knob, and tighten at desired location.

**2**

Loosen threaded knobs on rear of Claw to move arms and accommodate for cargo.

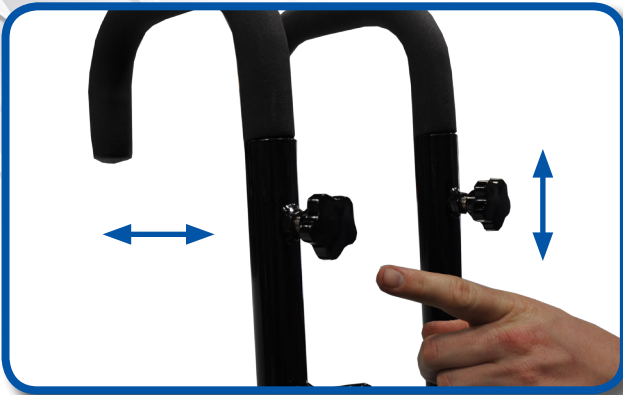

For upper adjustment loosen threaded knobs on rear of claw. The upper arms can be adjusted, vertically and horizontally for different varieties of cargo.

# INSTALLATION COMPLETE

VISIT [WWW.MYMADJAX.COM](http://WWW.MYMADJAX.COM) FOR MORE INSTALLATION VIDEOS.

## HARDWARE PACK

### Pack 1

- 4 - 10mm x 45mm counter sunk phillips #3
- 12 - 10mm flat washers
- 4 - 10mm lock washers
- 8 - 10mm nuts

## WARRANTY PARTS

### W01-66-1

- Middle Bar Bracket with Bottom Ring

### W01-66-2

- Upper Bar with Sleeve

### W01-66-3

- Lower Bar with Sleeve

### W01-66-4

- Threaded Knob

### W01-66-5

- Hardware Pack

### W01-9-68

- Rail Attachment lower fastener Bracket

### W01-9-69

- Rail Attachment Main Bracket

01-066 - THE CLAW ATTACHMENT (PAIR)  
FOR GENESIS300/250 REAR DELUXE SEAT

WARRANTY PARTS  
EXPLODED VIEW DIAGRAM

